
 


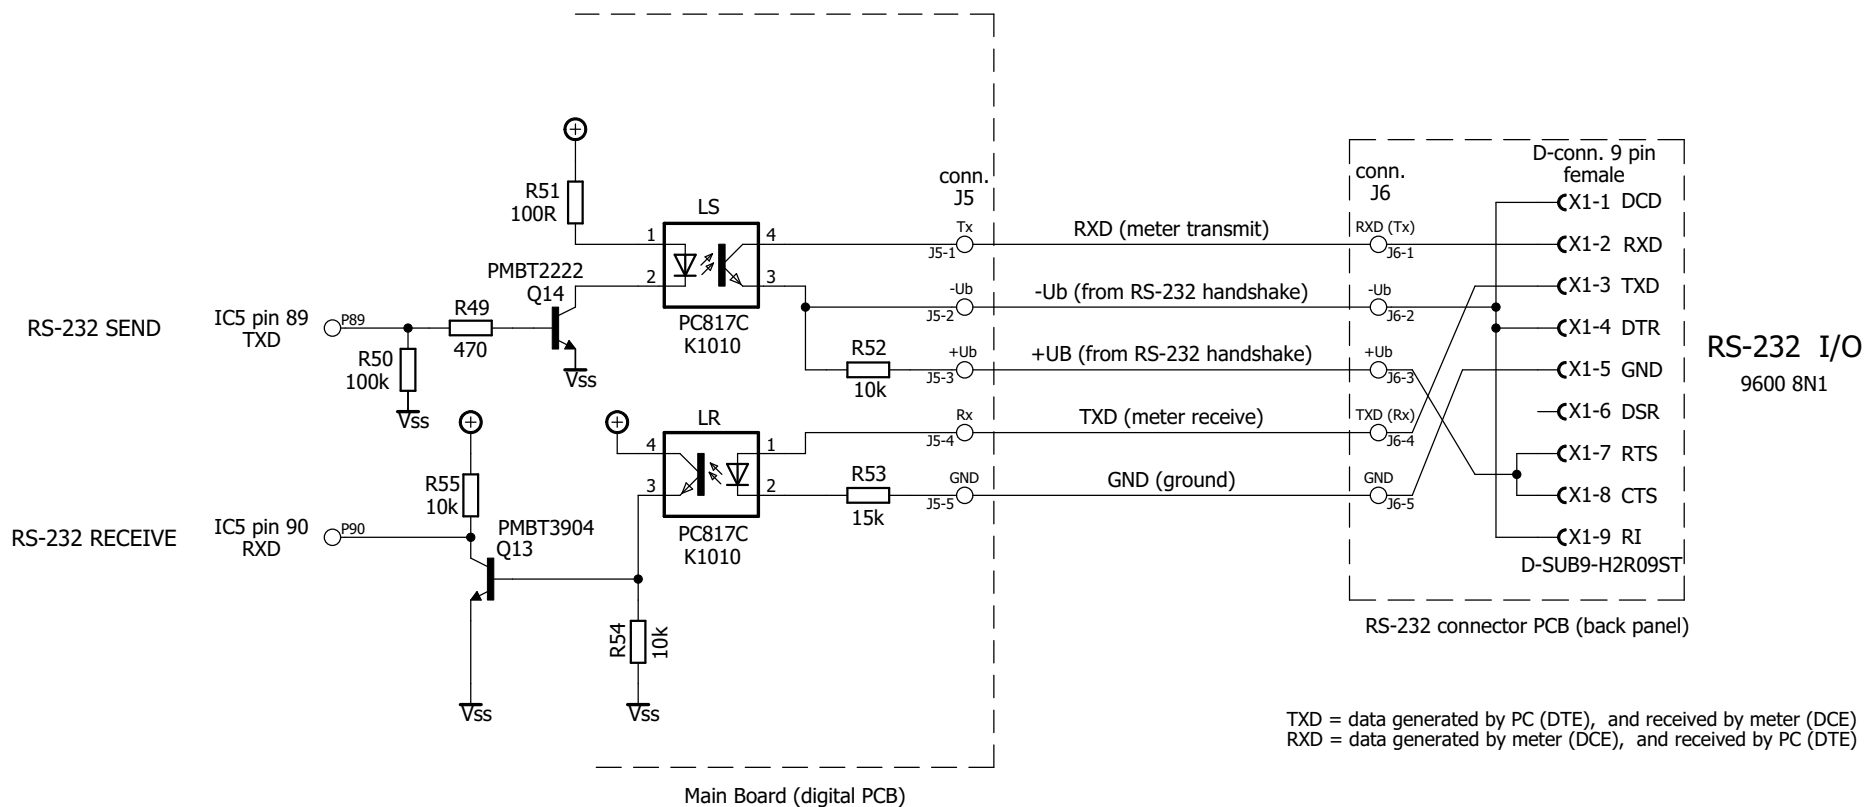

TXD = data generated by PC (DTE), and received by meter (DCE)
 RXD = data generated by meter (DCE), and received by PC (DTE)

-Ub: negative power supply is drawn from DTR.
 +Ub: positive power supply is drawn from RTS.
 So these handshake lines should be set to correct levels to make the interface work...





Miedema Geluidstechniek
 Rika Hopperlaan 20 3584 GN Utrecht
 Tel. 030-2511913 info@miedemageluid.nl

TITLE: Vici DM8145 - RS-232 output

File: Vici DM8145 org v1.1 (Eagle V7.5) REV: 1.1

Date: 13-06-2023 18:02 Get: Gertjan Miedema

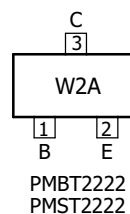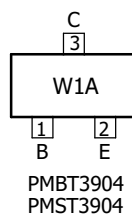

RS-232 I/O

9600 bits/s
 8 databits
 No parity
 1 stop bit
 no flow controll

wired as DCE (modem)
 use standard "straight" cable